


Thank you for using our products.

**INSTALLATION INSTRUCTIONS
 AC BELLS**

Use this product according to this instruction manual. Please keep this instruction manual for future reference.

GENERAL:

The 43T Bell Series is UL Listed under Standard 464 for Audible Signal Appliances. The 43T Bell Series is also ULC Listed under Standard CAN/ULC-S525-07 for Audible Signaling Appliances. The Bell's design features low power consumption with a high sound output, and includes suppression to minimize the RFI generated by the contacts. The Bells are available in either an AC model, for indoor or outdoor use in vibrating modes. Models are available with a 6" or 10" gong as shown below. The various mounting options available for the Bell Series, makes for a convenient and economical installation. The 43T Bell is suitable for outdoor use with the WBB Weatherproof backbox (see Mounting Option D).

NOTE: All **CAUTIONS** and **WARNINGS** are identified by the symbol . All warnings are printed in bold capital letters.

⚠ WARNING: PLEASE READ THESE INSTRUCTIONS CAREFULLY. FAILURE TO COMPLY WITH ANY OF THE FOLLOWING INSTRUCTIONS, CAUTIONS AND WARNINGS COULD RESULT IN IMPROPER APPLICATION, INSTALLATION AND/OR OPERATION OF THESE PRODUCTS IN AN EMERGENCY SITUATION, WHICH COULD RESULT IN PROPERTY DAMAGE, SERIOUS INJURY OR DEATH TO YOU AND/OR OTHERS.

⚠ WARNING: THE 43T HORN APPLIANCE IS A "FIRE ALARM DEVICE – DO NOT PAINT."

SPECIFICATIONS:

<i>Table 1: Ratings Per UL/ULC</i>								
Model Number	Type	Gong Size	Rated Voltage (VRMS)	UL/ULC Voltage Range (VRMS)	Maximum RMS Current	dBA at 10 Feet		Mounting Options
						ULC Anechoic	UL 464 Reverberant	
43T-G6-24	AC Vibrating	6"	24	16.0-33.0	0.666A	85	85	A,B,C,D
43T-G6-115		6"	115	96.0-132.0	0.117A	85	85	A,B,C,D
43T-G10-24		10"	24	16.0-33.0	0.666A	86	88	A,B,C,D
43T-G10-115		10"	115	96.0-132.0	0.117A	86	88	A,B,C,D

<i>Table 2B: ULC Directional Characteristics</i>		
Axis	dBA	Angle
Horizontal	-3dBA	86 degrees left and right
	-6dBA	90 degrees left and right
Vertical	-3dBA	86 degrees up and down
	-6dBA	90 degrees up and down


⚠ WARNING: FOR UL/ULC APPLICATIONS THESE APPLIANCES WERE TESTED TO THE OPERATING VOLTAGE LIMITS OF 16-33 VOLTS FOR 24V MODELS OR 96-132V FOR 115V MODELS. DO NOT APPLY 80% AND 110% OF THESE VOLTAGE VALUES FOR SYSTEM OPERATION.

⚠ WARNING: MAKE SURE THAT THE TOTAL RMS CURRENT REQUIRED BY ALL APPLIANCES THAT ARE CONNECTED TO THE SYSTEM'S PRIMARY AND SECONDARY POWER SOURCES DO NOT EXCEED THE POWER SOURCES' RATED CAPACITY OR THE CURRENT RATINGS OF ANY FUSES ON THE CIRCUITS TO WHICH THESE APPLIANCES ARE WIRED. OVERLOADING POWER SOURCES OR EXCEEDING FUSE RATINGS COULD RESULT IN LOSS OF POWER AND FAILURE TO ALERT OCCUPANTS DURING AN EMERGENCY, WHICH COULD RESULT IN PROPERTY DAMAGE AND SERIOUS INJURY OR DEATH TO YOU AND/OR OTHERS.

When calculating the total currents: Use Table 1 to determine the highest value of "RMS Current" for an individual bell (across the expected operating voltage range of the bell), then multiply these values by the total number of bells; be sure to add the currents for any other appliances, powered by the same source and include any required safety factors.

⚠ WARNING: CHECK THE MINIMUM AND MAXIMUM OUTPUT OF THE POWER SUPPLY AND STANDBY BATTERY AND SUBTRACT THE VOLTAGE DROP FROM THE CIRCUIT WIRING RESISTANCE TO DETERMINE THE APPLIED VOLTAGE TO THE SIGNALING APPLIANCE.

WIRING DIAGRAM:

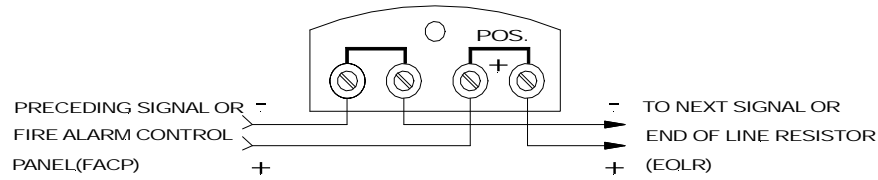

- Remove bell shell (Do not mix shells from other units.)
- Connect Wiring (Refer to Wiring Diagram.)
- Mount Bell To Backbox Using Screws Supplied With Unit.
- Reinstall Bell Shell (Note keyhole alignment.)

NOTE: Wiring method shall be in accordance with CSA C22.1, Canadian Electrical Code, Part 1, Safety Standard for Electrical Installations, Section 32.

MOUNTING OPTIONS:

<p style="text-align: center;"><u>BASIC BELL</u></p> <p>BASIC UNITS ARE SUPPLIED WITH (4) SCREW TERMINALS FOR CONNECTION TO THE POWER SOURCE. (2) #8-32 SCREWS ARE PROVIDED WITH EACH FOR MOUNTING.</p> <p style="text-align: center;">GUIDE PIN</p>	<p style="text-align: center;"><u>BELL SHELL MOUNTING</u></p> <p style="text-align: center;">GUIDE PIN ALIGN PIN HOLE WITH GUIDE PIN</p>	<p style="text-align: center;"><u>A SEMI-FLUSH MOUNTING</u></p> <p>STANDARD 4" SQUARE BACKBOX TO BE MOUNTED IN WALL</p> <p style="text-align: center;">#8-32 SCREWS</p> <p style="text-align: center;"><u>MAXIMUM NUMBER OF CONDUCTORS</u> AWG #18 AWG #16 AWG #14 AWG #12 4 4 4 4</p>
<p style="text-align: center;"><u>B SURFACE MOUNTING</u></p> <p>STANDARD 4" SQUARE BACKBOX TO BE MOUNTED ON WALL SURFACE</p> <p style="text-align: center;">#8-32 SCREWS</p> <p style="text-align: center;"><u>MAXIMUM NUMBER OF CONDUCTORS</u> AWG #18 AWG #16 AWG #14 AWG #12 4 4 4 4</p>	<p style="text-align: center;"><u>C CONCEALED CONDUIT MOUNTING</u></p> <p>ADAPTOR PLATE WITH #8-32 & #6-32 SCREWS & BUSHING</p> <p>EXISTING BOX IN WALL</p> <p style="text-align: center;">#8-32 SCREWS</p> <p style="text-align: center;"><u>MAXIMUM NUMBER OF CONDUCTORS</u> AWG #18 AWG #16 AWG #14 AWG #12 4 4 4 4</p>	<p style="text-align: center;"><u>D WEATHER RESISTANT MOUNTING * (WBB)</u></p> <p>WEATHER RESISTANT BACKBOX TO BE MOUNTED ON WALL SURFACE</p> <p>1/2" CONDUIT ENTRANCE ON TOP</p> <p style="text-align: center;">#8-32 SCREWS</p> <p style="text-align: center;"><u>MAXIMUM NUMBER OF CONDUCTORS</u> AWG #18 AWG #16 AWG #14 AWG #12 4 4 4 4</p>

* Suitable for outdoor use with the WBB Weatherproof backbox (see Mounting Option D).

MOUNTING PROCEDURES:

1. For weather resistant installation, use outdoor mounting option. Outdoor backbox must be mounted vertically with "TOP" as marked to allow any moisture or condensation to drain properly through drain holes on bottom of backbox.
2. Each bell mechanism is adjusted to operate only with the shell provided. Do not mix shells and mechanisms during installation. Do not readjust bell mechanisms during installation.
3. Each input terminal accepts one lead for in-out wiring of 12-22 AWG wire. Strip wire leads approximately 1/2" for connection to terminals. Break wire run to provide electrical supervision.
4. All bells will operate on "coded systems" up to 2 on-off cycles per second.
5. The polarity shown in the wiring diagram is for proper operation of the appliances in alarm mode. For supervision mode, the polarity should be reversed.
6. Anechoic dB ratings are for "free field" (anechoic) conditions. Typical indoor sound output is usually higher than rated anechoic dB.
7. Backboxes for all bells should be securely mounted. Looseness may degrade sound output. Conduit entrance to backboxes should be selected to insure sufficient wiring clearance.

ANY MATERIAL EXTRAPOLATED FROM THIS DOCUMENT OR FROM COOPER NOTIFICATION MANUALS OR OTHER DOCUMENTS DESCRIBING THE PRODUCT FOR USE IN PROMOTIONAL OR ADVERTISING CLAIMS, OR FOR ANY OTHER USE, INCLUDING DESCRIPTION OF THE PRODUCT'S APPLICATION, OPERATION, INSTALLATION AND TESTING IS USED AT THE SOLE RISK OF THE USER AND COOPER NOTIFICATION WILL NOT HAVE ANY LIABILITY FOR SUCH USE.

LIMITED WARRANTY

Cooper Wheelock, Inc. dba Cooper Notification and Cooper Notification, Inc. (each, a "Seller") products must be used within their published specifications and must be PROPERLY specified, applied, installed, operated, maintained and operationally tested in accordance with these instructions at the time of installation and at least twice a year or more often and in accordance with local, state and federal codes, regulations and laws. Specification, application, installation, operation, maintenance and testing must be performed by qualified personnel for proper operation in accordance with all of the latest National Fire Protection Association (NFPA), Underwriter's Laboratories (UL), National Electrical Code (NEC), Occupational Safety and Health Administration (OSHA), local, state, county, province, district, federal and other applicable building and fire standards, guidelines, regulations laws and codes including, but not limited to, all appendices and amendments and the requirements of the local authority having jurisdiction (AHJ). Seller products when properly specified, applied, installed, operated, maintained and operationally tested as provided above are warranted against mechanical and electrical defects for a period of (a) three (3) years from date of manufacture with respect to MEDC and Seller Industrial Signals and Seller Fire and Security Notification Appliances and Devices, or (b) one (1) year from date of manufacture with respect to Waves and SafePath Voice Evacuation and Mass Notification Systems (date of manufacture is determined by date code.) Correction of defects by repair or replacement shall be at Seller's sole discretion and shall constitute fulfillment of all obligations under this warranty. THE FOREGOING LIMITED WARRANTY SHALL IMMEDIATELY TERMINATE IN THE EVENT ANY PART NOT FURNISHED BY SELLER IS INSTALLED IN THE PRODUCT. THE FOREGOING LIMITED WARRANTY SPECIFICALLY EXCLUDES ANY SOFTWARE REQUIRED FOR THE OPERATION OF OR INCLUDED IN A PRODUCT. SELLER MAKES NO REPRESENTATION OR WARRANTY OF ANY OTHER KIND, EXPRESS, IMPLIED OR STATUTORY WHETHER AS TO MECHANICALITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER MATTER.

USERS ARE SOLELY RESPONSIBLE FOR DETERMINING WHETHER A PRODUCT IS SUITABLE FOR THE USER'S PURPOSES, OR WHETHER IT WILL ACHIEVE THE USER'S INTENDED RESULTS. THERE IS NO WARRANTY AGAINST DAMAGE RESULTING FROM MISAPPLICATION, IMPROPER SPECIFICATION, ABUSE, ACCIDENT OR OTHER OPERATING CONDITIONS BEYOND SELLER'S CONTROL.

SELLER DOES NOT WARRANT THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE OR THAT THE SOFTWARE WILL MEET ANY OTHER STANDARD OF PERFORMANCE, OR THAT THE FUNCTIONS OR PERFORMANCE OF THE SOFTWARE WILL MEET THE USER'S REQUIREMENTS. SELLER SHALL NOT BE LIABLE FOR ANY DELAYS, BREAKDOWNS, INTERRUPTIONS, LOSS, DESTRUCTION, ALTERATION, OR OTHER PROBLEMS IN THE USE OF A PRODUCT ARISING OUT OF OR CAUSED BY THE SOFTWARE.

THE LIABILITY OF SELLER ARISING OUT OF THE SUPPLYING OF A PRODUCT, OR ITS USE, WHETHER ON WARRANTIES, NEGLIGENCE, OR OTHERWISE, SHALL NOT IN ANY CASE EXCEED THE COST OF CORRECTING DEFECTS AS STATED IN THE LIMITED WARRANTY AND UPON EXPIRATION OF THE WARRANTY PERIOD ALL SUCH LIABILITY SHALL TERMINATE. SELLER IS NOT LIABLE FOR LABOR COSTS INCURRED IN REMOVAL, REINSTALLATION OR REPAIR OF A PRODUCT BY ANYONE OTHER THAN SELLER OR FOR DAMAGE OF ANY TYPE WHATSOEVER, INCLUDING BUT NOT LIMITED TO, LOSS OF PROFIT OR INCIDENTAL, INDIRECT, CONSEQUENTIAL, SPECIAL, PUNITIVE OR EXEMPLARY DAMAGES. THE FOREGOING SHALL CONSTITUTE THE SOLE REMEDY OF THE PURCHASER AND THE EXCLUSIVE LIABILITY OF SELLER.

IN NO CASE WILL SELLER'S LIABILITY EXCEED THE PURCHASE PRICE PAID FOR A PRODUCT.

LIMITATION OF LIABILITY

SELLER'S LIABILITY ON ANY CLAIM OF ANY KIND, INCLUDING NEGLIGENCE AND BREACH OF WARRANTY, FOR ANY LOSS OR DAMAGE RESULTING FROM, ARISING OUT OF, OR CONNECTED WITH THIS CONTRACT, OR FROM THE MANUFACTURE, SALE, DELIVERY, RESALE, REPAIR OR USE OF ANY PRODUCT COVERED BY THIS ORDER SHALL BE LIMITED TO THE PRICE APPLICABLE TO THE PRODUCT OR PART THEREOF WHICH GIVES RISE TO THE CLAIM. SELLER'S LIABILITY ON ANY CLAIM OF ANY KIND SHALL CEASE IMMEDIATELY UPON THE INSTALLATION IN THE PRODUCT OF ANY PART NOT FURNISHED BY SELLER. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY CLAIM OF ANY KIND UNLESS IT IS PROVEN THAT ITS PRODUCT WAS THE DIRECT CAUSE OF SUCH CLAIM. FURTHER, IN NO EVENT, INCLUDING IN THE CASE OF A CLAIM OF NEGLIGENCE, SHALL SELLER BE LIABLE FOR INCIDENTAL, INDIRECT, CONSEQUENTIAL, SPECIAL, PUNITIVE OR EXEMPLARY DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE PRECEDING LIMITATION MAY NOT APPLY TO ALL PURCHASERS.